

QG-Loading an Option Authorisation File (OAF) from a Console


This document is used when an AGI-4 receiver is shipped prior to purchase of OAF for TopNET Global D or OmniSTAR G2 Subscriptions.

Applies to P/N 1015672-01 and 27-100710-02


1. Copy the OAF file to USB

You will need to copy the supplied OAF file onto a USB (Toshiba USB recommended).

Note: Do not try to open or read this file from your PC as it will corrupt the OAF and fail to work.

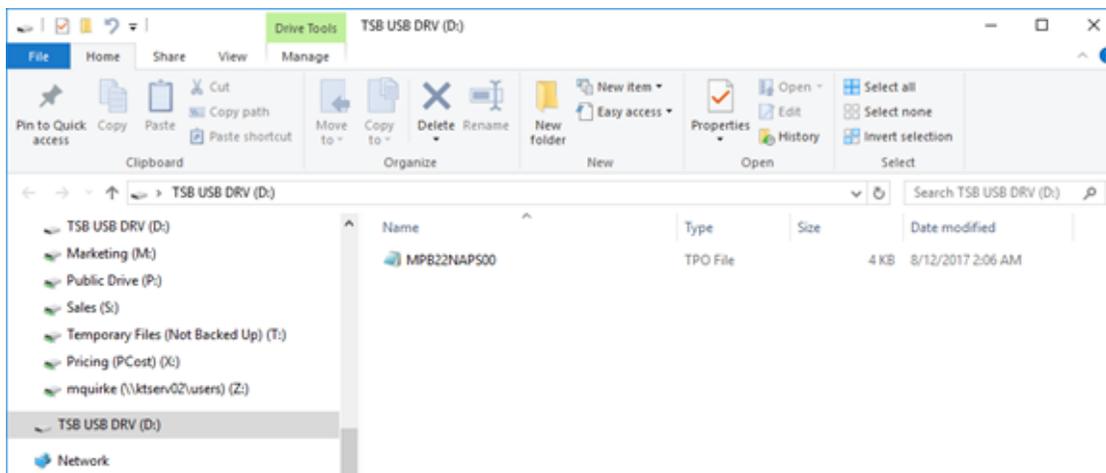


Safely eject the USB from your computer and plug into the console, you can do this by **Right Clicking** the **USB** as shown in the tree structure.

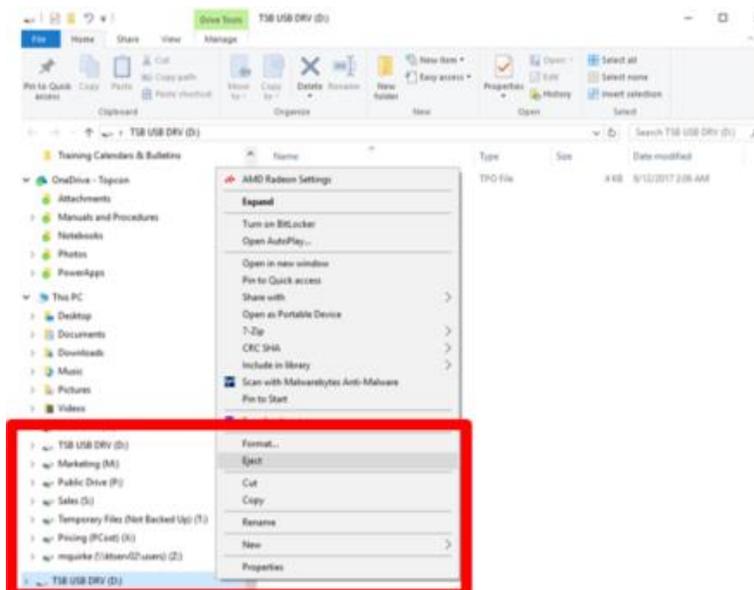


2. Load OAF

Go to the **Settings Screen** on the console by selecting the **Spanner** icon.

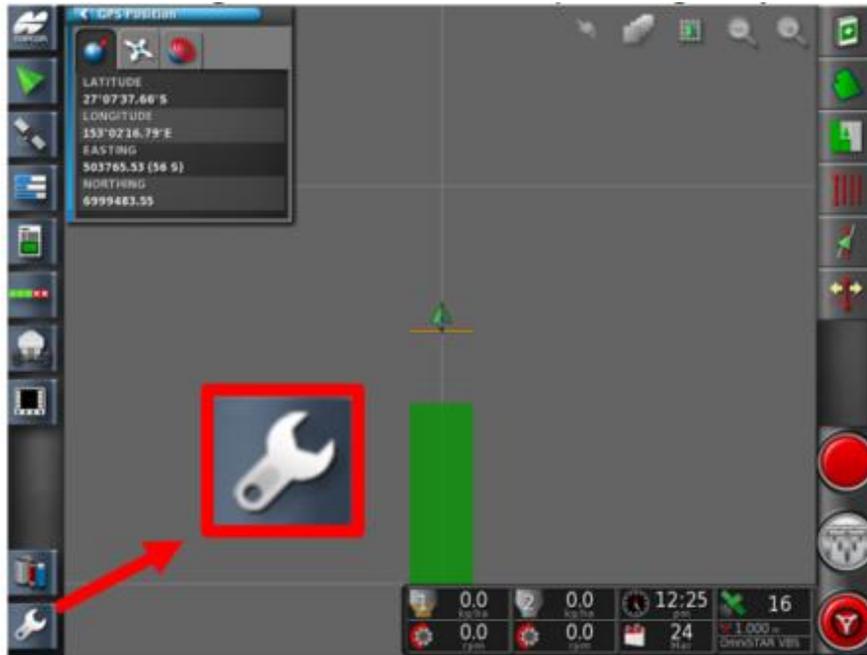


You need to be in **Expert Access Level** to load an OAF. Go to **User / Access Level** and if you are not already then touch on the Access Level and select **Expert**.

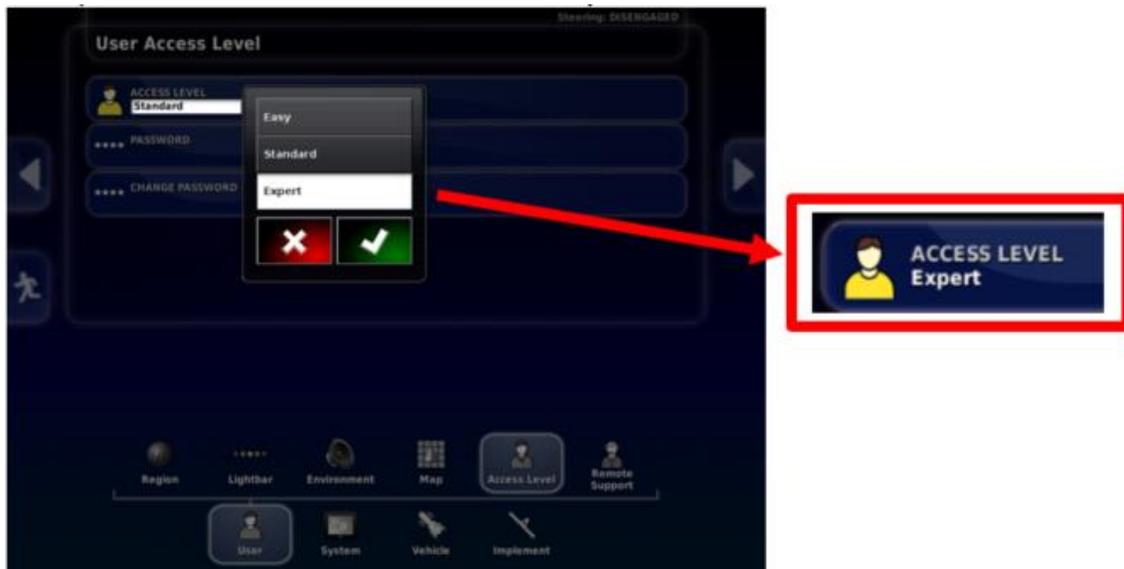


Navigate to **System / GPS / Receiver** and select **Load OAF File**, you will get a warning to say the console will be restarted, select **OK**.

A Wizard will guide you through the steps of loading the OAF.


Step 1: Press **Next** to continue.

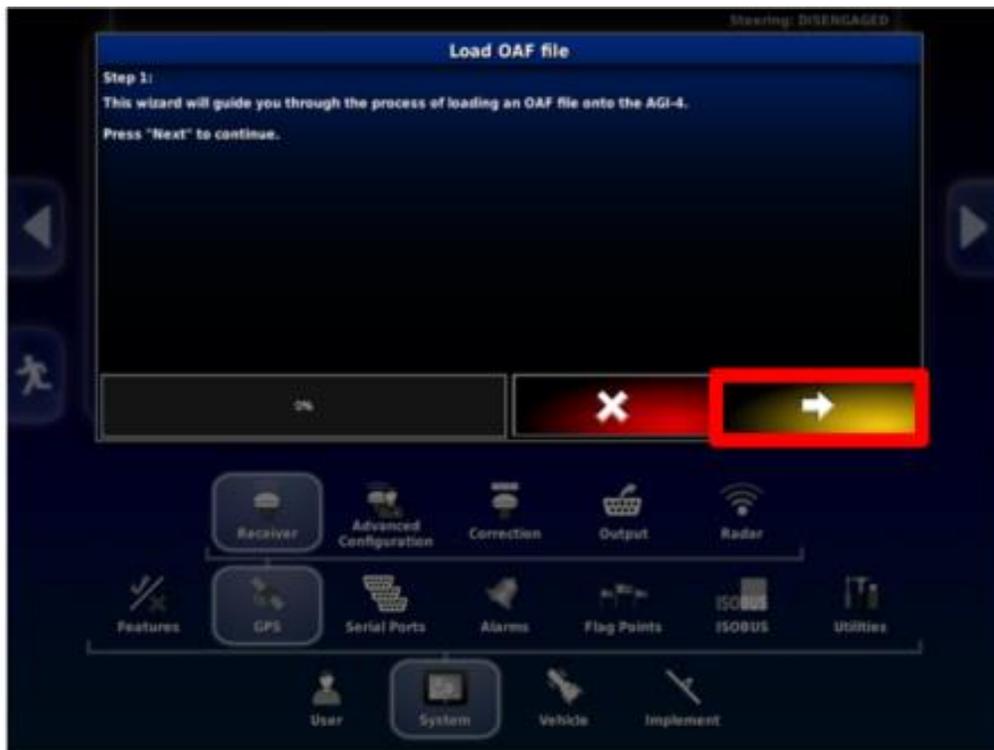


Step 2: Insert **USB** (if not already done) and press **Next** to continue.

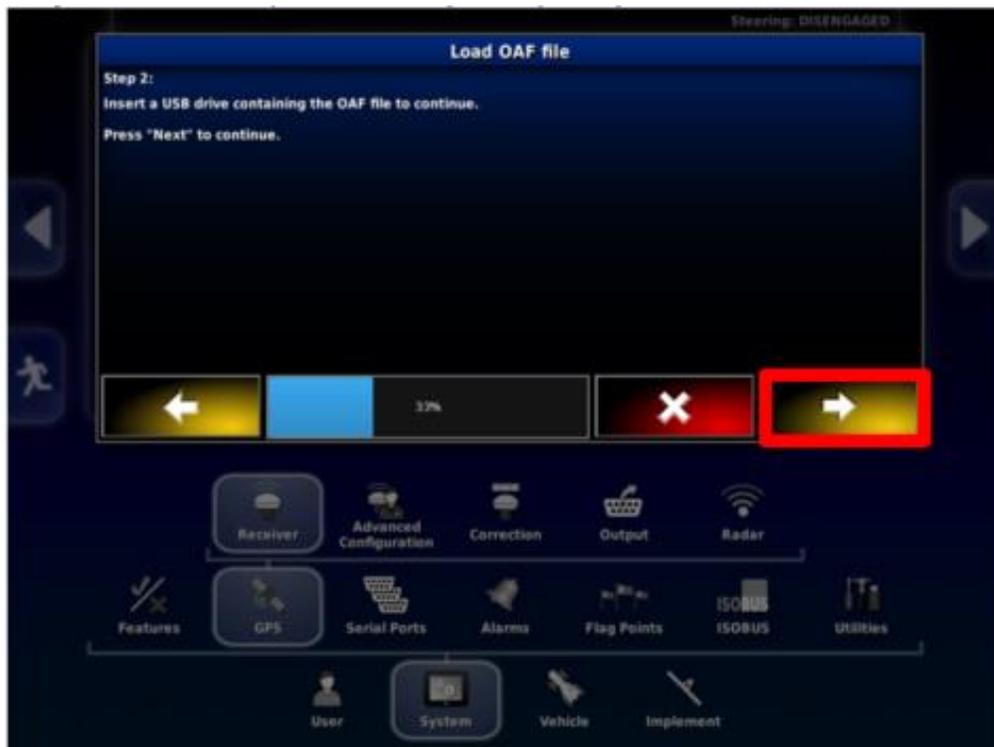


Step 3: Locate the OAF (.tpo) file.

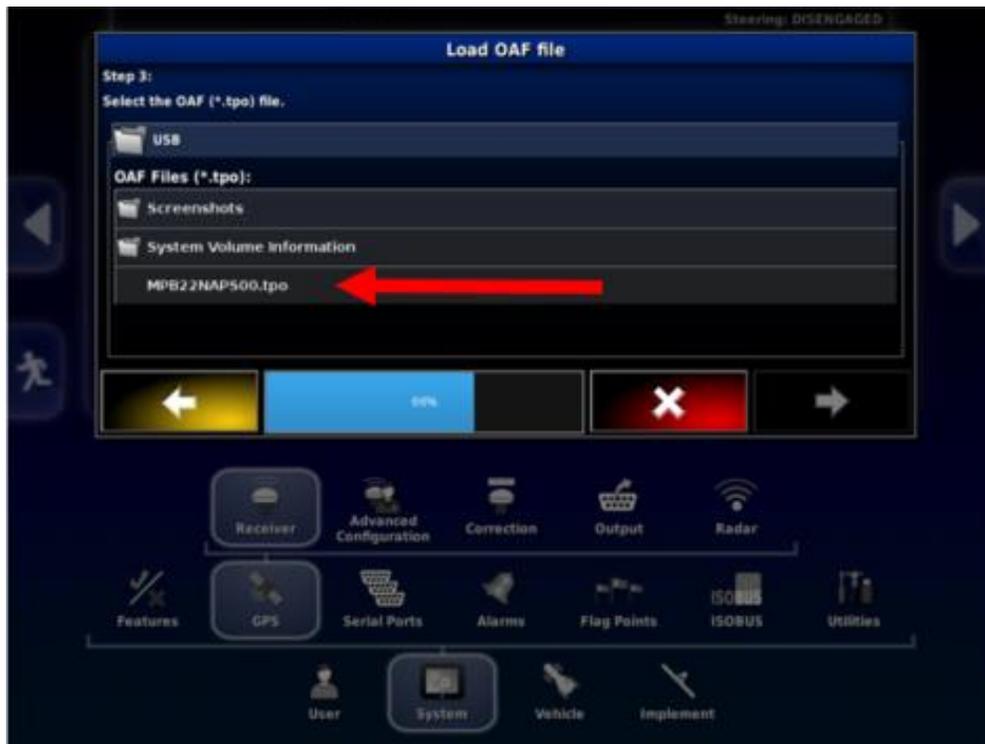

Step 3 (continued): Select the OAF (.tpo) file to turn it white then select **Next** to continue.

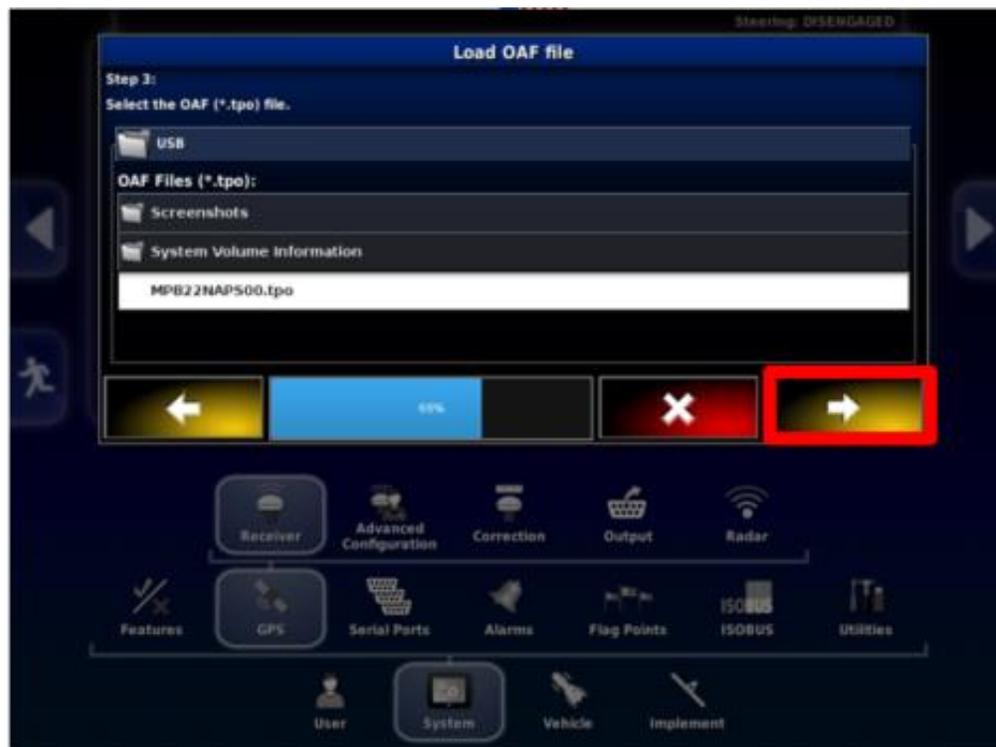

Step 4: Press **Okay** to restart and load the OAF. Wait for the console to restart.

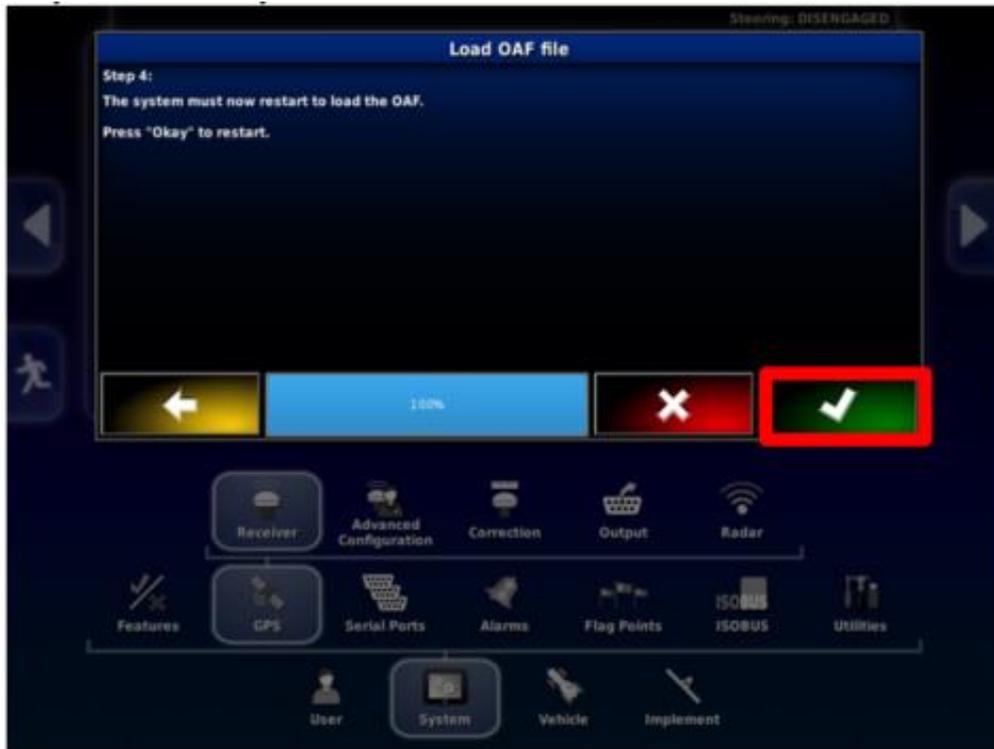

3. Confirm OAF Loaded

Once the console has restarted go to **System / GPS / Correction** and touch **Correction Source** to see the dropdown list of available sources for the AGI-4.

If the OAF loaded successfully you will see the additional correction sources listed like shown below.





If no additional **OmniSTAR** corrections, or the **TopNET Global D** correction is not showing then the **OAF IS NOT loaded!**
Note: It can sometimes take several minutes for the loaded corrections to show

Sticker on box that AGI-4 is shipped in that confirms date and OAF number already loaded and applicable P/N 1015672-01 or 27-100710-02

